


## TAD-220-D Instructions

### 1 - Mounting

The unit can be mounted adjacent to or up to 2m away from auxiliary devices. Extended cable runs may become vulnerable to interference. The device is supplied with mounting lugs to enable mounting of the device without compromising waterproof seal. Effort should be made to keep the GSM away from potential interference from High voltage or similar environmental conditions.

### 2 - SIM Card

The unit may be supplied with a pre-installed SIM card. If it is not, to install the SIM card the open the box, disconnect the battery and insert the SIM card into the exposed SIM holder. The battery can be reconnected and the lid replaced ensuring that no wires are pinched.

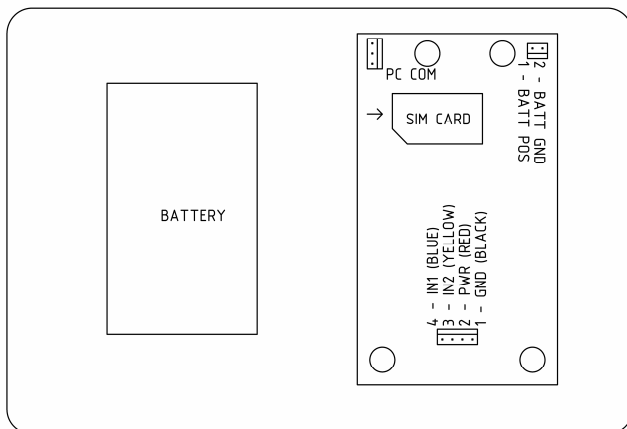

It is a good idea to first fit the SIM card into a mobile phone to ensure that it is registered and can successfully send text messages. Ensure that no PIN code is set on the SIM (the phone should not ask for a PIN after being turned on). Voice mail should also be disabled. After testing the SIM can be installed into the unit. If using a prepaid SIM card it is a good idea to use one whose balance can be checked and topped up without removing the SIM from the unit.


We do not recommend the use of specific SIM cards and those suited and able to provide the best coverage should be selected.

### 3 - Connection of Sensors / Triggers

The device is supplied with a cable for connection with sensors or external triggers. The TAD-220-D can be connected to common negative, open collector or dry contact outputs.

Red Positive Power Output (3-4V)  
Black Ground  
Blue Channel 1  
Yellow Channel 2

The following diagram illustrates the general connections required for use with Volt Free alarm contacts.

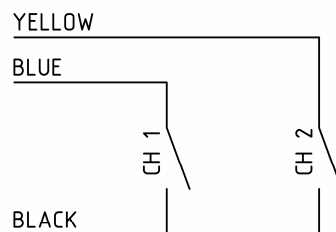

### 4 - Power

The TAD-220-D has a pre-fitted battery which will last up to 3 years depending on use. There is little need to disconnect the power when storing or using the unit due to its low power consumption. The clock needs to be set whenever the battery is replaced or the power disconnected.

It is important that only authorised replacement battery packs are used. The use of other battery packs may damage the unit and will invalidate your warranty. The battery used is a lithium primary cell and should be disposed of correctly.


### 5 - Status LED

The TAD-220-D has a red / green status LED visible with the lid removed. The number of green flashes indicates the GSM signal strength (1 is little/no signal, 5 is maximum strength).

Any red flashes indicate that the unit is armed.

### 6 - Low power Sensor / Other devices Configuration

Auxiliary low power sensors can be powered and connected to the TAD-220-D for internal or external applications. Other voltage free NO / NC devices such as door contacts can also be connected. Set up instructions for these devices should be followed at all times. The input channels have a filter to prevent unintended triggering and require a valid steady signal for 1 second to trigger.

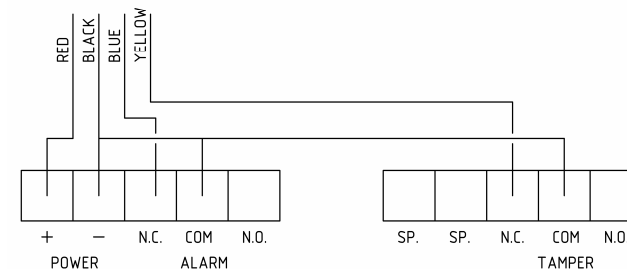

The above diagram illustrates the connections to a standard PIR sensor. Channel 2 should be configured as Normally Closed Loop and Channel 2 as Normally Closed 24h. This will give you both alarm and tamper protection.

### Important Notes about GSM Operation

The TAD-220-D is designed to have extremely low power consumption. This is achieved through a range of features, one of which is selectively powering the GSM system.

The GSM system uses a lot of power so it is switched off when not in use. When the GSM system is powered off the system is unable to receive text messages. The GSM system is powered up and able to receive commands at the following times:

- For 5 minutes after power is initially applied.
- For 5 minutes after an automatic status message is sent.
- For 5 minutes after the config button on the remote is pressed.

The 5 minutes is extended each time the unit receives a message so the unit will stay in full power mode whilst being configured.

### Important Notes about Power Saving

The battery life of up to 3 years is based on the unit sending 1 message per day and being put into full power mode for 5 minutes per day. Adding extra phone numbers to the unit or entering full power mode more than this will adversely affect battery life.

It is also calculated at an ambient temperature of 0-30 degrees Centigrade and with average GSM signal strength. Reducing the temperature or using in an area of extremely low signal strength may adversely affect battery life.

## 7 - Configuration

### (Please read Important Notes about GSM Operation first)

There are various configuration options which can be set in the control electronics of the device using SMS text messages.

All of the commands sent to the unit must contain the correct password. Throughout this manual it is assumed that the default password has not been changed.

The unit will reply to all messages sent to it with the correct password. Nothing sent to the unit (including the password) is case sensitive. The default password is *SECRET*, if you have changed it use your password instead.

#### 7.1 - Set up phone numbers

The TAD-220-D is capable of generating a number of different messages and sending them to different phone numbers. Which messages each of the phone numbers receive is determined by its event mask. The event mask is a number ranging from 0-126 and is calculated by adding together the event codes for the required messages.

Event Message	Code
Automatic Status Message	2
Low Battery	4
System Arm	8
System Disarm	16
Input 1 Alarm	32
Input 2 Alarm	64

For example, the event mask required to receive messages when the alarm on Channel 1 is triggered, automatic status messages and messages when the battery is low would be 38 (2 + 4 + 32).

Up to 10 phone numbers can be configured in the unit.

To configure phone number 1 to receive all possible messages send the following:

*Secret, phone, 1, 07753123456, 126*

To configure phone number 10 to receive messages when Channel 1+2 are triggered or armed send the following:

*Secret, phone, 10, 07753654321, 104* (8 + 32 + 64 = 104)

To delete phone number 4 send the following:

*Secret, phone, 4, delete*

#### 7.2 - Change the Password

The password is set to *SECRET* by default and should be changed. Send this message to change the password (for example to *BICYCLE*):

*Secret, password, bicycle*

#### 7.3 - Set the Clock

The TAD-220-D has an inbuilt clock to allow it to auto arm and disarm. It needs to know the time and the day (Mon - Sun). The clock needs to be set whenever the battery is replaced or the power disconnected.

To set the clock to 12.30 on Monday the following message should be sent:

*Secret, clock, 1, 1230* (The 1 indicates Monday)

To set the clock to 09.00 on Friday the following message should be sent:

*Secret, clock, 5, 0900*

#### 7.4 - Set auto arm and disarm times (optional)

The TAD-220-D can be configured to automatically arm and disarm itself at certain times. There is one arm and one disarm event allowed per day. Not all arm and disarm times have to be used. To disable one of the times set it to 9999.

To set the unit to arm at 11AM and disarm at 6.30PM on Tuesday send the following:

*Secret, timer, 2, 1100, 1830*

To disable the timer on Thursday send the following:

*Secret, timer, 4, 9999, 9999*

To set the unit to arm at 6PM on Friday and disarm at 7AM on Monday send the following:

*Secret, timer, 5, 1800, 9999*

*Secret, timer, 1, 9999, 0700*

#### 7.5 - Configure Automatic Status Reporting (optional)

The TAD-220-D can be configured to send status messages at a time you can define and at a rate you can define. The rate is set in days with a maximum of 240. By default it will send a message every day at noon. It is important that this is enabled because SIM cards are vulnerable to disconnection by the networks as a result of inactivity. Please check your providers' usage requirements to avoid disconnection. The unit will also send a message after power up.

For this feature to work at least one phone must be configured to receive the Automatic Status Message event (See section 7.1).

To configure the unit to send messages at 3PM every 5 days send this message:

*Secret, auto, 1500, 5*

To disable automatic status reporting (NOT RECOMMENDED), send this message:

*Secret, auto, disable*

#### 7.6 - Call feature (Firmware V10 and above)

To reduce the potential of a *Pay as you go* SIM card from being disconnect by a network the device can be programmed to make a regular voice call to a programmed phone number. This call would be required to be answered in order for the network to recognize the call as a chargeable call. Once answered the device will hang up after 5 seconds.

This feature can be programmed to occur at a specific time at a programmed regular interval. The interval is in days 1-240 and the time is based on the 24hr clock.

If for example you require the call to be made to the number 02920 765432 at 9.00am every 30 days you would program via text the following:

*Secret, call, 02920765432, 0900, 30*

Remember the call must be answered so your selection for the number called is important.

#### 7.7 - Set the IR Codes

The unit is armed and disarmed by an IR remote control. The code for the IR remote can be found printed inside its case. This code must be sent to the unit to allow the remote to work with it. The code for the remote supplied with the unit is preset. It is possible to use up to 3 remote controls with one unit.

To set the IR code for the first remote to 12345 send the following:

*Secret, Key, 1, 12345*

To set the IR code for the third remote to 54321 send the following:

*Secret, Key, 3, 54321*

#### 7.8 - Configure the Entry, Exit and Dead Times (optional)

After arming the unit, it will wait for the Exit time before it will arm. The exit time is measured in seconds and has a maximum of 240 (4 minutes).

After the unit is triggered, it will wait the Entry time before sending messages. The entry time is measured in seconds and has a maximum of 240 (4 minutes). The entry time allow you to disarm the alarm with the remote control before it sends messages out.

The unit will then ignore the sensor for the Dead time before re-triggering. The dead time is measured in minutes and has a maximum time of 240 (4 hours). If set to 255 the unit will not rearm itself until it is disarmed and re-armed.

To set the entry time to 20 seconds, the exit time to 30 seconds, and the Dead time to 5 minutes send this message:

*Secret, time, 20, 30, 5*

#### 7.9 - Name the system (optional)

The unit can be given a name (Site ID) which is included with all messages it sends. The name can be up to 16 characters long.

To change the name to 'south warehouse', send this message:

*Secret, site, south warehouse*

### 7.10 - Input Channel Configuration

Each channel can be set as either NO or NC loop and selected to be armed 24hr or only when the system is Armed.

Options for each Channel are as follows:

Mode	Code
Disabled	0
Normally Open Loop	1
Normally Closed Loop	3
Normally Open 24hr	5
Normally Closed 24hr	7

To program Channel 1 as Normally closed and disable Channel 2 send this message:

*Secret, mode, 3, 0*

To program Channel 1+2 as Normally closed send

*Secret, mode, 3, 3*

When an input is programmed as 24hr the entry time is ignored.

### 8 - Operation

**(Please read Important Notes about GSM Operation first)**

This section describes the operation of the TAD-220-D after it has been installed and configured.

#### 8.1 - To query the status of the unit

If *Secret, status* is sent to the unit it will reply with a message detailing its GSM signal strength, battery level and whether it is armed. If you phone the unit from any of the registered phones then hang up within 3 rings it will send you a status text message.

To query the status of the unit, send this message:

*Secret, status*

#### 8.2 - To Query the Credit of the SIM Card

The *Credit* command is used to set the USSD string which is used to request the credit remaining on a prepay SIM card. This is network specific. For O2 in the UK set it to *\*#10#*. For Vodafone set it to *\*#1345#*. If the number is omitted the unit will return the credit remaining on the SIM.

To set the USSD string for Vodafone, send this message:

*Secret, credit, \*#1345#*

To check the credit remaining on the SIM, send this message:

*Secret, credit*

#### 8.3 - To Arm or Disarm the system

To arm or disarm the system, send one of these messages:

*Secret, arm*

*Secret, disarm*

Please bear in mind that the unit must be awake to receive these commands. See also section 9.

#### 8.4 - To Reset the device.


To reset the system to factory settings, send the following message:

*Secret, reset*

### 9 - Keyfob Remote Operation

The TAD-220-D is supplied with a 3 button IR keyfob. This remote control uses infrared signals to control the unit. It must be pointed directly into the IR LED at the bottom of the unit for operation. The button must be held for a couple of seconds until the unit beeps to confirm the command.

**The TAD-220-D can only receive IR signals for a period of 10 minutes after the last activation of one of its inputs. This is for power saving. This means that you must trigger one of the inputs before attempting to arm or disarm the unit.**

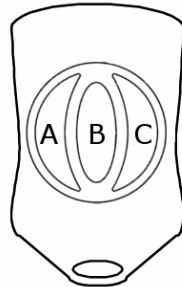

Button A arms the unit. It will beep once to confirm this then start the exit timer.

Button B is the Config button. When in sleep mode, this button will wake the unit and connect it to the GSM network to receive configuration commands. It will beep 10 times. In full power mode it will cause the unit to beep out its status as described below.

Button C disarms the unit. It will beep twice to confirm this.

When the config button is pressed and the unit is in full power mode it will beep as follows:

- Beep 1-5 times to indicate GSM signal strength. 1 is little or no signal, 5 is full signal.
- Pause 1 second.
- Beep 1-6 times to indicate battery level.
- Pause 1 second.
- Beep once if armed, twice if disarmed.

The unit must be powered up for at least an hour before a battery level is given. Until this time is up it will beep once for battery level.

### 10 - Support

Should you have any problems installing or configuring the TAD-220-D please contact your supplier.

Should you forget your unit password, please contact your supplier to have your password reset remotely.

### 11 - Default Settings

Unless otherwise stated, the unit will be supplied with the following default settings:

Site ID - Not Set.

No phone numbers registered.

Password set to secret.

Disarmed.

Credit number set to *\*#10#*.

Entry time set to 20s.

Exit time set to 20s.

Dead time set to 10 minutes.

Automatic status messages sent every day at noon.

No timers set.

IR Code set up for the supplied remote.

No input channels enabled

#### TAD-220-D Micropower GSM Signalling Unit

This is to certify that the above listed product is in conformity with the following standard(s) or other normative document(s), **ETSI EN 301 511, EN 301 489-7, EN 60950-1**, following the provisions of **R&TTE Directive 1999/5/EC**.

Also that, to the best of our knowledge based on the information provided to us by our suppliers, the above listed product has been designed and are manufactured to be in full compliance with the **European Union's (EU) Restriction on use of Hazardous Substances (RoHS) Directive 2002/95/EC**.

Specifications may change without notice. Product is produced in the UK by TAD Electronics.